

Golf Rangefinder

Safety Instructions-Warning

- Do not view the emissions for long periods of time with magnified lenses
- Do not put the device out of the storage temperature of -20~50°C
- Avoid direct sunlight to the eyepiece to avoid damaging the eyepiece display/internal components. Put it in a protective case when you are not using it.

Safety Instructions-Disposal

 
- The equipment contains electrical and/or electronic components and therefore cannot be disposed of in the same way as ordinary household waste. These wastes should be disposed of at community-provided waste collection points
- If the equipment contains replaceable batteries, they must be removed first and then disposed of in accordance with the relevant regulations if necessary.

Cleaning and Daily Maintenance

The lens of our laser rangefinder are fully multi-coated for highest light transmission. As well as other multi-coated optics, which need to clean the lenses. Keep the lens clean, no dirt on the lens.

1. Removing finger prints, clean with the lens demisting cloths in a circular way.
2. When using the cleaning solution, it needs to be placed on the wipe cloth. Do not directly on the lens.

 
Introduction

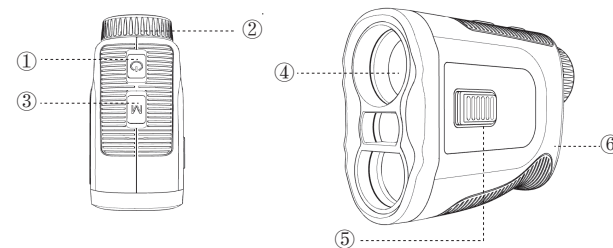

 
- ① Power Button
- ② Eyepiece Knob (Adjust knob to target)
- ③ Switch Unit Button (Switch unit M or Y)
- ④ Laser Transmission Objective Lens
- ⑤ Slope Switch
- ⑥ Charging Port

LCD Display

- ① Angle
- ② Target Indicator
- ③ Linear Distance
- ④ Distance Unit M/Y
- ⑤ Lightning Icon
- ⑥ Flag Icon
- ⑦ Slope Compensation Distance

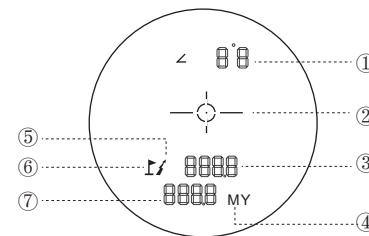 




Power Button

Press the  to power on
No operation after 30 seconds, power off.

Switch Unit Button

 
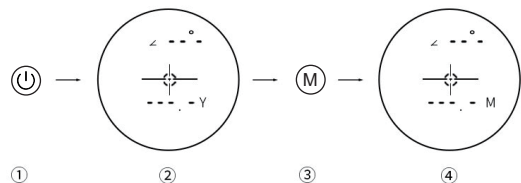 
Press  to switch the unit Y or M



 
- 1 Press the  to start
- 2 The display image
- 3 Short press the 
- 4 Switch the unit of the distance successfully.


Slope Switch

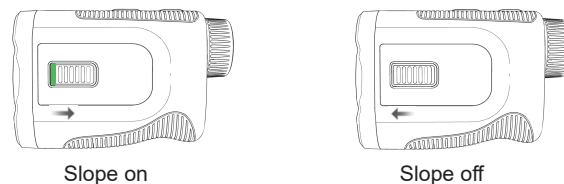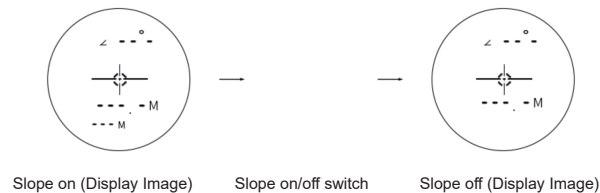

The slope function can be easily turned on and off with visual slope switch. This allows golfer to get compensated distance when they want it.

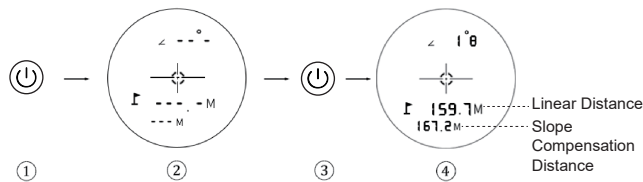

● How to use slope on



Turn on Slope and you will see a logo "" appear on the display.

- 1 Press the  to start
- 2 Select the target object and aim the target
- 3 Press the  to measure
- 4 The data will be displayed on the screen

 
For Example:

AC distance is 160 yards. AB distance is also 160 yards, although it is on a slope with a 6% grade.

 
If golfer were to play B hole as 160 yards, the ball would fall to C via D.

 

Due to the slope, it should be played as a AE 168 yard shot.

AE 168 yard is play as distance based on slope.

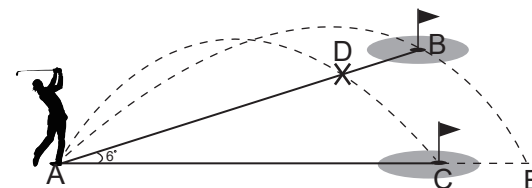

● How to use slope off

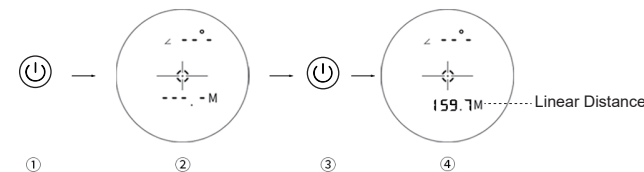

- 1 Press the  to start
- 2 Select the target object and aim the target
- 3 Press the  to measure
- 4 The data will be displayed on the screen

Technical Specifications

Angle Ranging Scope	-30° to 30°
Laser Safety	Class1, Laser Wavelength 905nm
Power Supply	Lithium Battery
Magnification	6X
Field Of View	6.5°
Ranging Error	±1M/Y
Focusing Mode	Manual Focusing Eyepiece
LCD Display	Transmission LCD Display
Lens Quality	Multi-Coated
Ranging Method	Semiconductor Laser Ranging

Flagpole lock and vibration

In Golf Mode.

1. measure the background of the slope behind the flag.
2. Press and hold the Measure button (to enter Scan Mode) and slowly move from the background toward the flag. The rangefinder will recognize the flag and the flag logo will flash and vibrate.
3. The distance to the flag and the slope compensation distance are displayed.

Disclaimer: This is an entry level rangefinder when the flag is far away or affected by weather. The rangefinder may not be able to find the flag. Single rangefinder mode cannot accurately identify a flag when the object to be measured (flagpole) overlaps the background.